


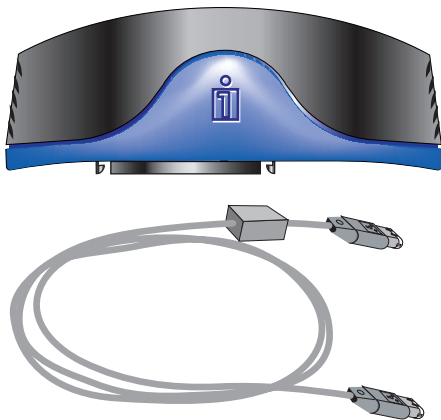


Zip® 250™ Drive  
FireWire® Accessory

# Quick Install



# 1

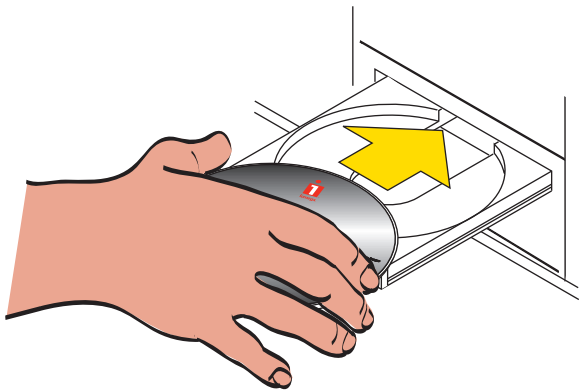


## Insert the IomegaWare™ software CD and install the software.

The software will work with all Iomega FireWire® and USB drives.

**Macintosh® users**—Double-click on the IomegaWare installer™ icon.

**PC users**—If the CD does not start automatically, double-click on the CD icon in My Computer, then double-click on the **Setup.exe** icon. To access the User's Manual, see step 6 in this booklet.

# 2

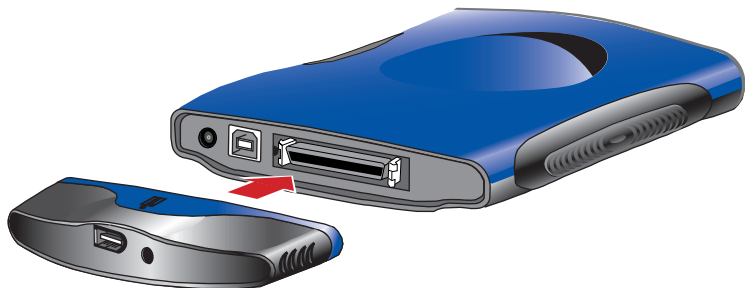


## Connect the FireWire<sup>®</sup> Accessory to the Zip<sup>®</sup> 250<sup>™</sup> drive.

**NOTE:** The FireWire<sup>™</sup> Accessory locks onto the Zip<sup>®</sup> 250<sup>™</sup> connector. Always connect the Zip 250 FireWire Accessory before connecting the FireWire cable.

To remove the FireWire<sup>™</sup> Accessory, disconnect the FireWire<sup>™</sup> cable first, then pull firmly.

# 3

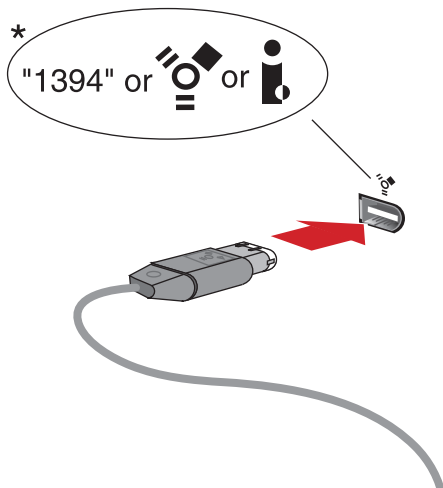


**Restart the system. Plug the FireWire® cable into the computer.**

A “1394” logo\* will identify the connector on your computer. The drive can be connected or disconnected to the computer while the computer is on.

**CAUTION!** If you are connecting multiple FireWire® devices view the User’s Manual HTML (see step 6 in this booklet) for important power information to prevent potential system or device damage.

# 4

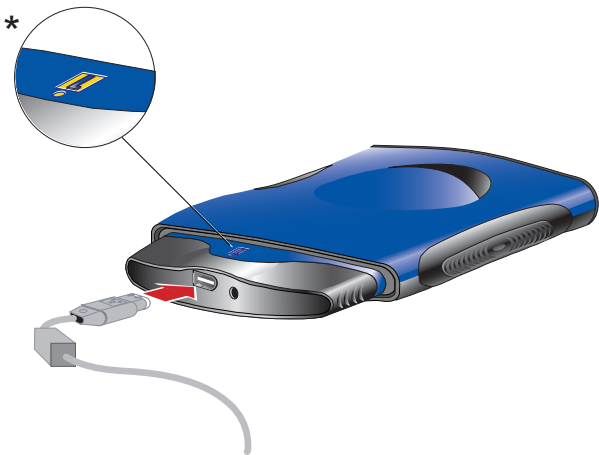


## Connect the FireWire® cable to the Accessory (as shown).

If the light on the top of the FireWire® Accessory\* does not come on, connect the Zip® 250™ power supply.

**IMPORTANT! Windows® 98 SE users:** If you see the dialog box "Please insert the disk labeled Windows 98 Second Edition CD-ROM." **Insert the CD that came with the FireWire® Accessory instead. Click OK.**  
This message will only appear the first time you connect the Accessory.

5\*

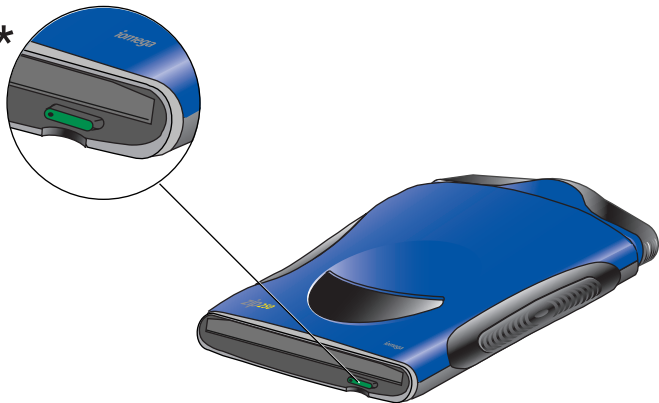

The green power light\* will flash momentarily and you will hear the drive power up.

If the Zip® 250® drive does not power up, you may need to connect the Zip 250 drive power supply.

**IMPORTANT:** Insert a disk only after you are sure the drive has power. Remove the Zip® disk from the drive before disconnecting it from the computer.

# 6

## To view the User's Manual HTML installed on your system.

**Macintosh® users**—Double-click the IomegaWare® folder, then click on the **FireWire Accessory User's Manual** folder icon.

**PC users**—Double-click on the IomegaWare® icon on your desktop, then the **Get Help** tab, then double click the **FireWire Accessory User's Manual** folder.

To view the User's Manual, you must have Microsoft® Internet Explorer® 3.0 or higher or Netscape Navigator® 4.5 or higher installed on your system.

Refer to the User's Manual HTML for other types of connections, connecting to a FireWire® chain, and connecting to a notebook computer.

## The User's Manual includes a complete list of worldwide support options!

Iomega Web Site

<http://www.iomega.com>

Automated FaxBack Help (U.S. & Canada)

1-888-4-IOMEGA (1-888-446-6342)

Technical Support/Customer Service

1-888-4-IOMEGA (1-888-446-6342)

### CE (European Community)

**Product Name:** Iomega Zip 250MB FireWire Accessory

**Model Number:** ZIP1394A

The Zip 250MB FireWire Accessory conforms to the following European Directive(s) and Standard(s): Application of Council Directives: 89/336/EEC. Standards to which Conformity is declared: EN55022, EN50082-1. Importer's Name: Iomega Netherlands branch of Iomega International, S.A. Type of Equipment: Information Technology Equipment.

### Manufacturer/Responsible Party

Iomega Corporation

1821 West Iomega Way

Roy, UT 84067 U.S.A.

801-332-1000



Copyright © 2000 Iomega Corporation. Iomega, the stylized 'i' logo, the Zip 250 brand block and Zip are either registered trademarks or trademarks of Iomega Corporation in the United States and/or other countries. Microsoft Windows and NT are registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. Apple, Macintosh, Mac, FireWire, and the FireWire logo are registered trademarks or trademarks of Apple Computer, Inc. in the United States and/or other countries. Sony, i.Link, and the i.Link logo are registered trademarks or trademarks of Sony Incorporated in the United States and/or other countries. Certain other product names, brand names, and company names may be trademarks or designations of their respective owners.