




FotoShow™

Digital Image Center


Connecting the FotoShow™ Image Center to a TV



1. Read the User's Manual for more complete instructions

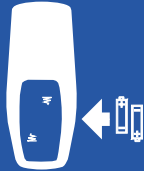


2. Put batteries in the FotoShow™ remote control

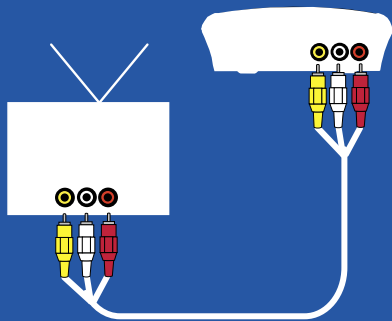


3. Connect the RCA cable to your FotoShow™ Image Center

4. Connect the RCA cable to the video input on your TV or VCR

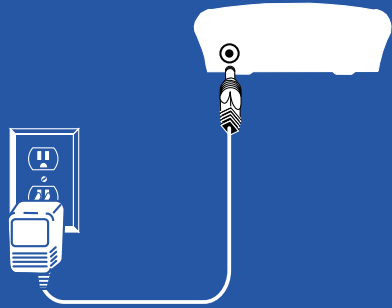

5. Connect the power adapter to your FotoShow™ Image Center


6. Plug the power adapter into an outlet or power strip

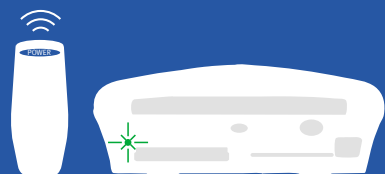


7. Press the POWER button on the FotoShow™ Remote Control



8. Turn on the TV and set it to the correct video input

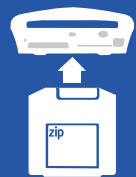

9. Insert the included Zip® disk into the FotoShow™ Image Center

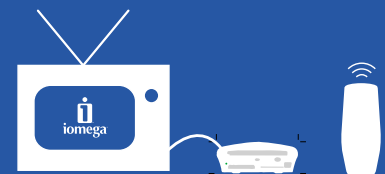

10. View the FotoShow™ demo. Start using your FotoShow™ Image Center



11. Read the User's Manual if you have any questions

See other side for additional instructions





FotoShow™

Digital Image Center

Connecting the FotoShow™ Zip® Drive to a Computer



 
1. Install the IomegaWare™ software




2. Read the USB Guidelines (on the back cover of the printed User's Manual)



3. Connect the USB cable to your computer



4. Connect the USB cable to your FotoShow™ Zip® drive

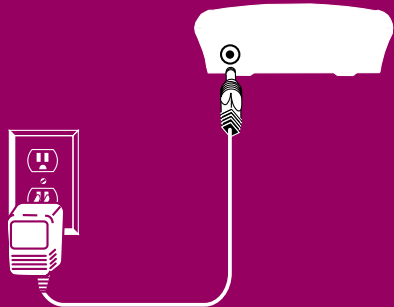


5. Connect the power adapter to your FotoShow™ Zip® drive

6. Plug the power adapter into an outlet or power strip



7. The eject button will flash momentarily

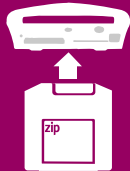

8. Insert the Zip® disk that came with your FotoShow™ Zip® drive



9. View the User's Manual (on the included Zip® disk), if you have any questions



See other side for additional instructions 

Copyright © 2000 Iomega Corporation. Iomega, the stylized "i" logo, IomegaWare, FotoShow, and Zip are either registered trademarks or trademarks of Iomega Corporation in the United States and/or other countries. PictureIQ is a trademark of PictureIQ Corporation.

30398000 09/01/00 F