

Installing Your ScreenPlay Pro HD

Easy connection and setup instructions to help you start enjoying ScreenPlay Pro HD!



Installation Overview	2
Loading Media Files	2
Connecting to a Computer	3
Connecting to a Network	4
Wired Network Connection	4
Wireless Network Connection	5
TV Connection Options	6
Playing Media Files	7
Copying Files from USB	8

Installation Overview

It's easy to connect and use your Iomega ScreenPlay Pro HD. Here's an overview of what you need to do:

- Load Your Multimedia Files to the ScreenPlay Pro HD
- Connect the ScreenPlay Pro HD to Your Home Network (OPTIONAL)
- Connect the ScreenPlay Pro HD to Your TV
- Activate the ScreenPlay Pro HD and Play Your Media Files

Loading Media Files to the ScreenPlay Pro HD

Before connecting the ScreenPlay to your TV, decide how you want to load media files to the ScreenPlay Pro HD. This will help you select the connection instructions you need.

- **Load Files Via Direct Connection to Your Computer**

This option works well if you have a large media library on your computer that you want to copy to your ScreenPlay Pro HD. Simply connect the ScreenPlay Pro HD to your computer via USB. You can then copy your media files directly to the ScreenPlay Pro HD using standard copy-and-paste or drag-and-drop. See "Connecting Directly to a Computer" for detailed instructions. After loading the media files to your ScreenPlay Pro HD, connect it to the TV and refer to the section on "Playing Your Media Files".

- **Load Files Via Your Home Network**

This option is ideal for copying media files to your ScreenPlay Pro HD when it's already connected to your TV because you don't have to disconnect the ScreenPlay Pro HD or access the back of the drive. You can also stream media files from the network without copying them to the ScreenPlay Pro HD. See "Connecting to Your Home Network" for instructions.

- **Copy Files From an External USB Device**

This option allows you to transfer media files from any USB 2.0 device, including cameras, camcorders, flash drives, and external hard drives. Like transferring files via the network, this option lets you add media files to your ScreenPlay Pro HD after it's connected to your TV. See "Copying Media Files from a USB Device" for instructions.

NOTE: When copying media files from a USB device, you must copy one file at a time. If you want to copy multiple media files and/or folders, it's easiest to connect the ScreenPlay Pro HD directly to your computer or use a network connection.



Connecting Directly to a Computer

Follow the instructions in this section to load media files from your computer to the ScreenPlay Pro HD before you connect it to your TV.

1. Use the included USB cable to connect the ScreenPlay Pro HD to a USB port on your computer.

HINT: Use the square USB port located just above the power jack towards the base of the ScreenPlay Pro HD.

2. Connect the power supply to the ScreenPlay Pro HD and an uninterruptible power supply (UPS) or power outlet.
3. Press the power button on the front of the ScreenPlay Pro HD to turn it on.
4. Copy and paste files to the ScreenPlay Pro HD just as you would with any other drive on your computer. See the user's manual for suggestions on organizing your files so they'll be easy to locate on your ScreenPlay Pro HD.
5. Use the safe removal procedure for your operating system to unmount the drive, then disconnect the ScreenPlay Pro HD from your computer.



NOTE: If you want to copy files from a Mac OS computer to your ScreenPlay Pro HD, you need to reformat it to FAT32. Use Disk Utility on your Mac, and select MS-DOS as the format type. If you need additional instructions, visit the support area on www.iomega.com. Look for the article on how to format an Iomega drive to FAT32 on a Macintosh computer.

Next connect the ScreenPlay Pro HD to your TV set. See the connection options on page 6.



Connecting to Your Home Network

When the ScreenPlay Pro HD is connected to your home network, you can stream or copy media files from any computer on the network. You can connect the ScreenPlay Pro HD to both your TV and your network at the same time, and it doesn't matter whether you make the network connection first or install on the TV first.

Wired Network Connection

Follow the instructions below for a wired network connection. Use the instructions on page 5 for a wireless network connection.

 
1. Use a standard ethernet cable to connect the ScreenPlay Pro HD to a network router, hub, or switch.

— or —

Connect the ScreenPlay Pro HD to the Ethernet port on a networked computer.

NOTE: The package does not include an ethernet cable.

2. Connect the power supply to the ScreenPlay Pro HD and an uninterruptible power supply (UPS) or power outlet.
3. The ScreenPlay Pro HD is automatically configured so you can browse and play back media files stored on your network volumes. If you want to copy files from your network volumes to the ScreenPlay Pro HD, just run the ScreenPlay Discovery tool to map a network drive letter for your ScreenPlay Pro HD.

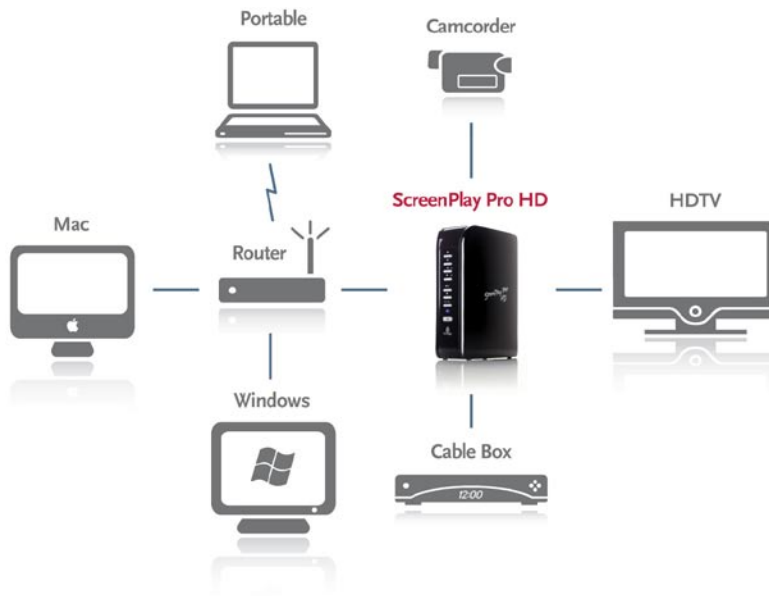

Wireless Network Connection

If you have a wireless network, you can use a supported WiFi adapter to connect the ScreenPlay Pro HD.

NOTE: The package does not include a WiFi adapter. See the support area on www.iomega.com for a list of supported wireless adapters.

Follow the instructions below to set up the wireless connection for your ScreenPlay Pro HD.

1. Connect the WiFi adapter to the USB host port on the back of the ScreenPlay Pro HD drive.
2. If you haven't already done so, connect the ScreenPlay Pro HD to your TV set. See the connection options on page 6.
3. Connect the power supply to the ScreenPlay Pro HD and an uninterruptible power supply (UPS) or power outlet.
4. Press the Standby/Power button on the front of the ScreenPlay Pro HD to turn it on, or press the STANDBY key on the ScreenPlay Pro HD remote control.
5. From the main ScreenPlay menu, select **Setup** and press the **ENTER** key on the ScreenPlay Pro HD remote control.
6. Select **Network** and press the **ENTER** key.
7. Select **Wireless Setup** and press the **ENTER** key.
8. Select **Modify** and press the **ENTER** key.
9. Select your network from the list of available wireless networks and press the **ENTER** key.



- NOTE:** If you need to enter a username and password to login to a network volume, use the virtual keyboard on the ScreenPlay Pro HD TV display. The password can use any combination of numbers and letters (lower case or caps). It can also use periods. It cannot use extended punctuation characters (such as !, @, #, \$, %, &, etc.)
10. When the configuration is complete, the ScreenPlay Pro HD will automatically connect to the wireless network. If it connects successfully, you will see a message indicating "Test complete", and the Network Setup menu will display showing the IP address used by the ScreenPlay Pro HD.
 11. Press the **HOME** key to return to the ScreenPlay Pro HD main menu.

Now you're ready to enjoy media files on your TV! See the instructions on page 7.



TV Connection Options

Connecting to Your TV via HDMI

 
If you have a high definition TV, the easiest way to connect the ScreenPlay Pro HD is via HDMI. Simply connect the HDMI cable to back of the ScreenPlay Pro HD and to the HDMI input connection on the TV. Now you're ready to start playing media on your TV! See the instructions on page 7.



Connecting to Your TV via Composite Video

Composite video is compatible with most TV sets, so you can use it if your TV doesn't have HDMI. The following instructions use the composite video and RCA audio connectors on the ScreenPlay Pro HD.


1. Connect the composite AV cable to the composite video output connector (top yellow) and the RCA audio output connectors (top red and white) on the back of the ScreenPlay Pro HD, matching the colors.
2. Connect the yellow (video) connector on the other end of the cable to the composite VIDEO input connection on the TV set.
3. Connect the white connector to the Left (L) audio input connection on the TV set.
4. Connect the red connector to the Right (R) audio input connection on the TV set.

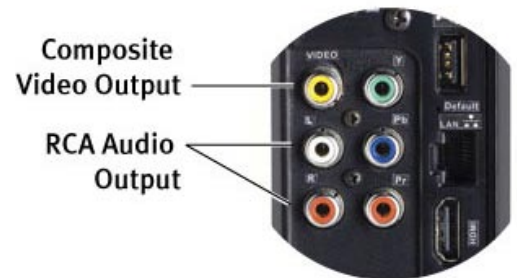

Connecting to Your TV via Component Video

If your TV has component video, you can use it instead of a composite connection for better video quality. With a component video connection, you can configure display ratio, progressive scan, and resolution up to 1080i. For the audio connection with component video, you can use either RCA audio or coaxial audio. See the user's manual for detailed instructions on connecting and configuring component video.

 NOTE: You will need to obtain a component video cable to use this connection option. If you want to use coaxial audio, you will also need to obtain a coaxial audio cable.

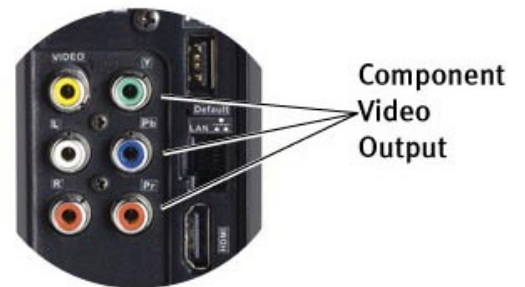

Once the ScreenPlay Pro HD is connected to your TV, go to the instructions for "Playing Media Files" on page 7.



Playing Media Files on Your TV

Before the ScreenPlay Pro HD will respond to commands from the remote control, it must first be activated for playback. Follow the instructions below.

1. Make sure the ScreenPlay Pro HD is correctly connected to video and audio input on your TV.
2. Connect the ScreenPlay Pro HD to power.
3. Turn on your TV and change the input setting as needed to receive input from the ScreenPlay Pro HD. Refer to the manual that came with the TV if you are uncertain how to do this.
4. Point the remote control at the front of the ScreenPlay Pro HD and press the STANDBY button, or press the Standby/Power button on the front of the drive.
5. During activation, the blue LED will blink brightly for several seconds. When the blue LED glows steadily, the ScreenPlay Pro HD is ready to use for playback.

NOTE: Pressing the STANDBY button again will return the ScreenPlay Pro HD to Standby mode and turn off the blue LED. While in Standby mode, the ScreenPlay Pro HD will not respond to other navigation or command buttons.

6. When the main menu displays on the TV, you can select a source to browse for your media files.
 - **ScreenPlay Pro** – browse for files you've copied to your ScreenPlay Pro HD
 - **External USB** – browse folders and files located on an external USB device
 - **Network** – browse shared network volumes
7. After navigating to the file you want, just press the ENTER (Play/Pause) key on the remote control.



See the complete user's manual on the Solution CD or the Iomega web site for more information on using your ScreenPlay Pro HD!



Copying Files from a USB Device

You can play files directly from an external USB 2.0 device connected to the host USB port on the ScreenPlay Pro HD, or you can copy files from the device to the ScreenPlay hard drive. Here's how:

1. Connect the USB device to the host USB port on the back of the ScreenPlay Pro HD.

NOTE: The USB device must be formatted NTFS or FAT32 to support playback on the TV. If the USB device is partitioned, the ScreenPlay Pro HD will read only the first partition.

2. Display the ScreenPlay Pro HD main menu on the TV screen and select "External USB".
3. Navigate to the file you want to copy or play and highlight it.
4. To play the file, press the ENTER (Play/Pause) key on the remote control.
5. To copy the file, press the MENU key and select "Copy".

NOTE: This option allows you to copy a single file. If you want to copy multiple files or folders, it might be easiest to connect both the ScreenPlay Pro HD and the USB device directly to a computer and use the operating system commands to copy-and-paste or drag-and-drop files.



Copyright © 2009 Iomega Corporation. All rights reserved. Iomega, ScreenPlay, and the stylized "i" logo are registered trademarks of Iomega Corporation in the United States and/or other countries. Apple, Macintosh, and Mac are either registered trademarks or trademarks of Apple Inc. in the United States and/or other countries. Certain other product names, brand names, and company names may be trademarks or designations of their respective owners. 030909c